


# Snookball Low

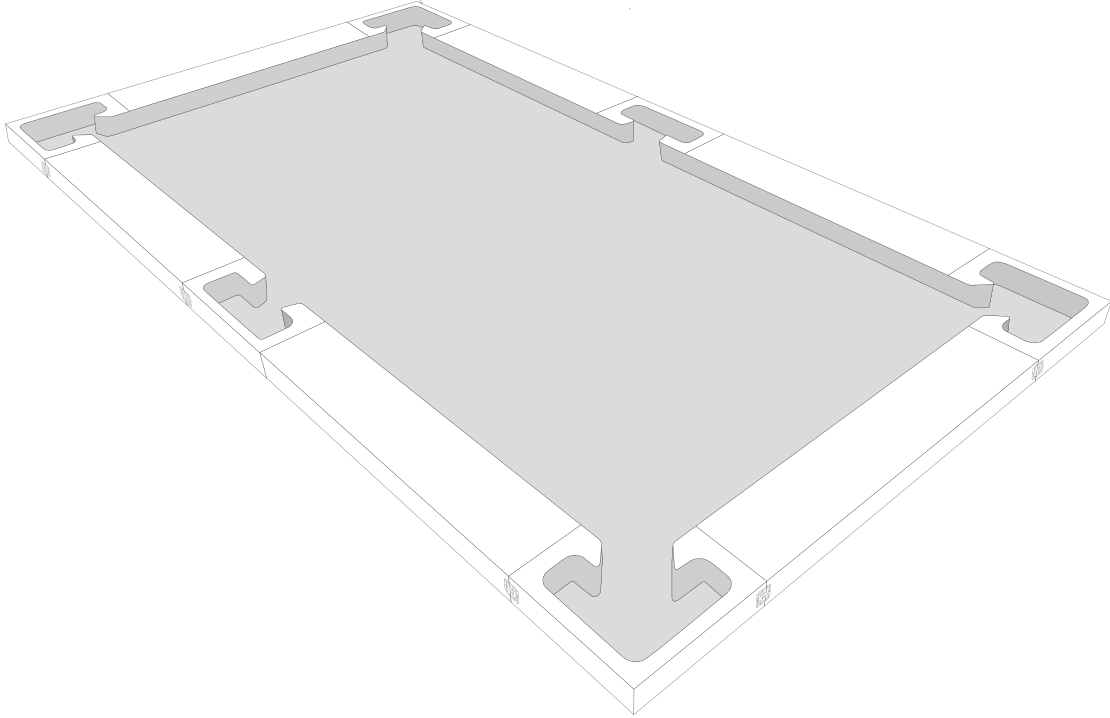

## **SNOOKBALL**

THE NEW SPORT-GAME

Keep these instructions  
Notice à conserver  
Conservar instrucciones  
Bitte bewahren Sie diese Hinweise auf  
Istruzioni da conservare  
Bewaar deze handleiding  
Instruções a conservar  
Zachowaj instrukcję  
Őrizze meg a használati útmutatót  
Сохранить инструкцию  
Păstrați instrucțiunile  
Návod je třeba uchovat  
Spara bruksanvisningen  
Запазете упътването  
Bu kılavuzu saklayınız

دليل يجب الاحتفاظ به


☒保存☒明☒

請保存說明書

SNOOKBALL -333 Avenue de Neuville 78950 - Gambais

Made in France - Fabriqué en France


ASSEMBLY • MONTAGE • MONTAJE • MONTAGE • MONTAGGIO • AFWERKING  
MONTAGEM • MONTAŽ • SZERELÉS • СБОРКА • MONTARE • MONTÁŽ  
MONTERING • МОНТИРАНЕ • MONTAJ • التركيب • 安装 • 安裝

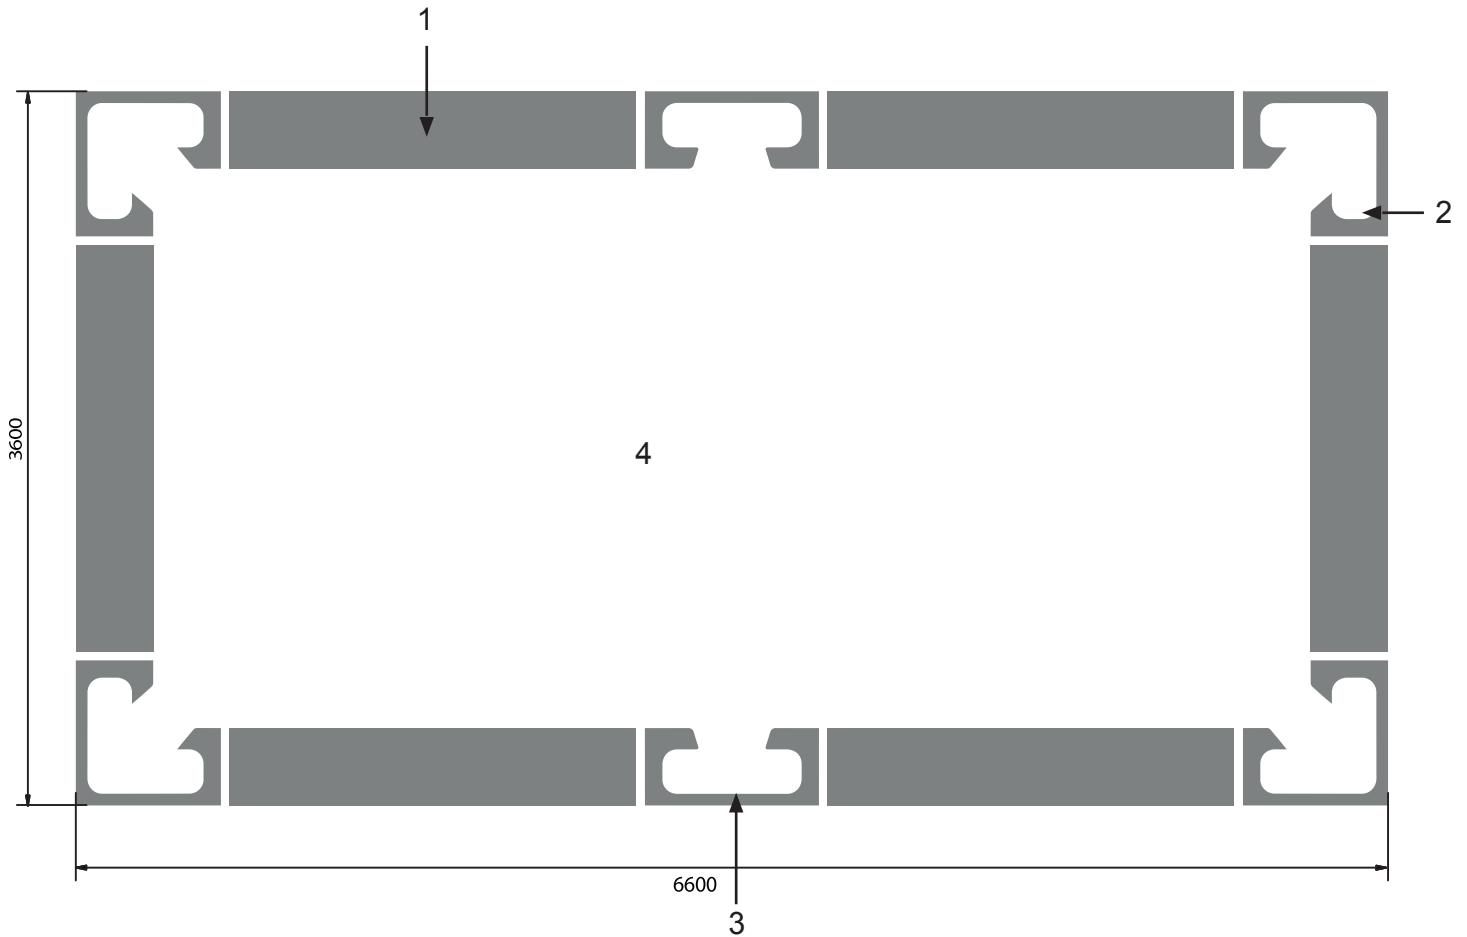

# ***SNOOKBALL***

THE NEW SPORT-GAME

1- Module X6 (L:2100mm / l: 400mm / h:170mm) (L:82.67in / l: 15.74in / h:6.69in)

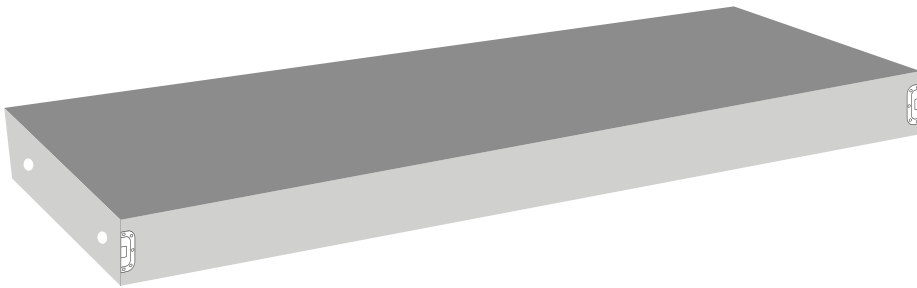


2- Corner pocket X4 (L:750mm / l: 400mm (750mm) / h:170mm) (L:29.52in / l: 15.74in / h:6.69in)




3- Central pocket X2 (L:900mm / l: 400mm / h:170mm) (L:35.43in / l: 15.74in / h:6.69in)



4- Game carpet X1 (3600mm X 6600mm) (141.73in X 259.84in)

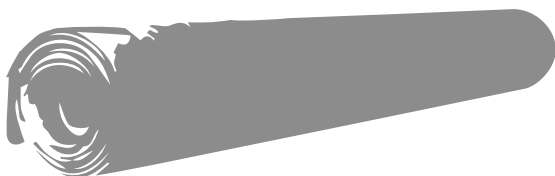

## 1- Installation of the playing mat :

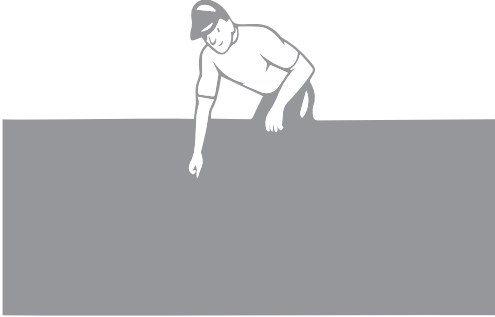


Unroll the carpet on the ground, then erase the fold with the hand.

## 2- Positioning of the modules :




Place the first module along the carpet.

## 3- Drop pocket positioning :

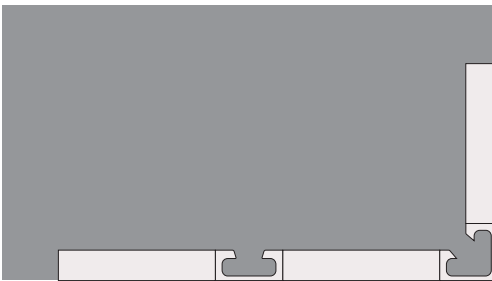


Keep on positioning on the carpet the different parts without fasten them to each other.

## 4- Adjustment of the cage and modules :

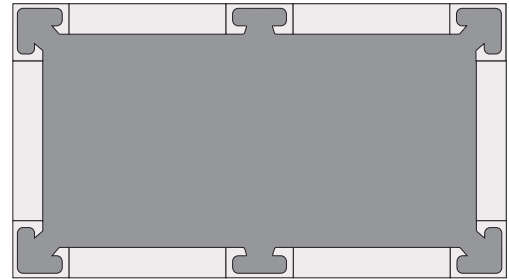


Once all the parts positionned, adjust them

## 5- Fixation of the different modules :

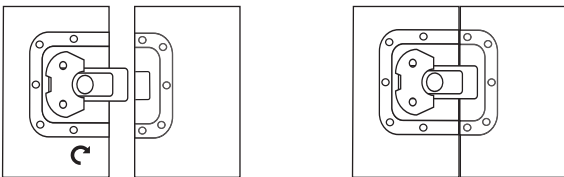


Fix the elements through the fly cases fixations by turning the clamping handle

## 6- Foot adjustment :

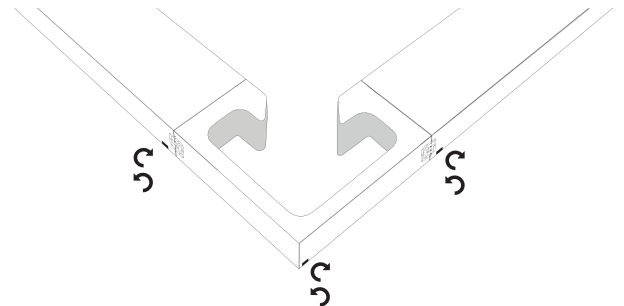

Compensate the floor unevenness by screwing the adjustable feet.  
HOLD AT LEAST 1CM BETWEEN THE GROUND AND THE STRUCTURE SO THAT THE STRUCTURE DO NOT TOUCH THE GROUND IN CASE OF BAD WEATHER.

ASSEMBLY • MONTAGE • MONTAJE • MONTAGE • MONTAGGIO • AFWERKING  
MONTAGEM • MONTAŽ • SZERELÉS • СБОРКА • MONTARE • MONTÁŽ  
MONTERING • МОНТИРАНЕ • MONTAJ • التركيب • 安装 • 安裝

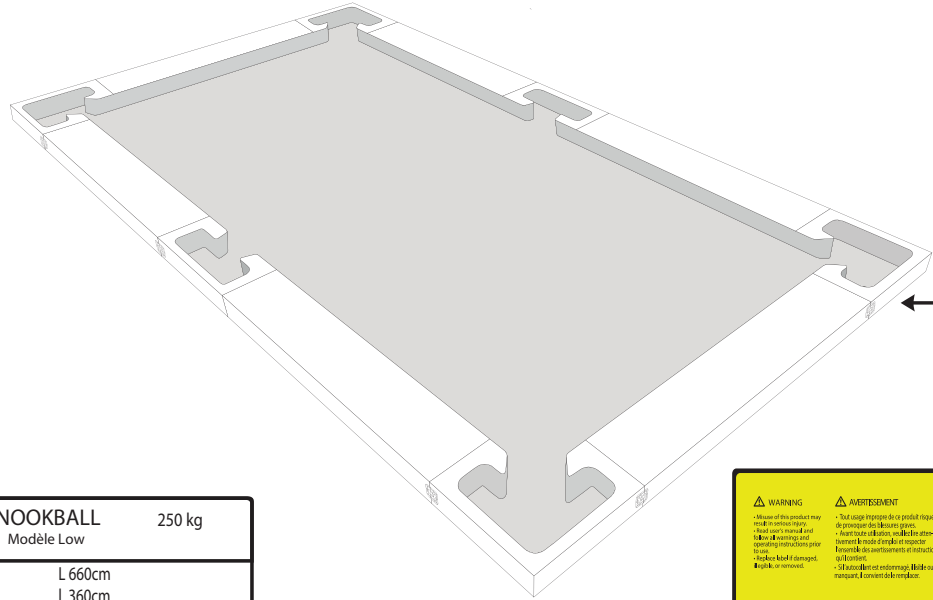

**WARNING**

- Misuse of this product may result in serious injury.
- Read user's manual and follow all warnings and operating instructions prior to use.
- Replace label if damaged, illegible, or removed.
- Keep hands, feet and hairs away from moving parts.

**MAXI**

X6

1200 kg

<b>SNOOKBALL</b> Modèle Low	250 kg
L 660cm I 360cm H 17 cm	

**WARNING**

- Misuse of this product may result in serious injury.
- Read user's manual and follow all warnings and operating instructions prior to use.
- Replace label if damaged, illegible, or removed.

**AVERTISSEMENT**

- Ne pas utiliser ce produit sans lire attentivement le mode d'emploi et respecter l'ensemble des avertissements et instructions qu'il contient.
- Si l'autocollant est endommagé, illisible ou manquant, il convient de le remplacer.

0-6

**AVERTISSEMENT**

- Avant toute utilisation, veuillez lire attentivement le mode d'emploi et respecter l'ensemble des avertissements et instructions qu'il contient.
- Si l'autocollant est endommagé, illisible ou manquant, il convient de le remplacer.

**ADVERTENCIA**

- Antes de cualquier utilización, lea atentamente el modo de empleo y respetar todas las advertencias e instrucciones que contiene.
- Si faltase la pegatina, o si la misma estuviera dañada o ilegible, conviene sustituirla.

**WARNHINWEIS**

- Vor jedem Gebrauch bitte diese Gebrauchsanweisung aufmerksam lesen und alle darin enthaltenen Warnhinweise und Anweisungen befolgen.
- Ist der Aufkleber beschädigt, unleserlich oder nicht mehr vorhanden, muss er ersetzt werden.

**AVVERTENZA**

- Prima di qualsiasi utilizzo, vi preghiamo di leggere attentamente le istruzioni per l'uso e di rispettare le avvertenze e le modalità d'impiego.
- Se l'etichetta è danneggiata, illeggibile o assente, occorre sostituirla.

**WAARSCHUWING**

- Voordat u het product gaat gebruiken, moet u de gebruiksaanwijzing lezen en alle waarschuwingen en instructies die hij bevat toepassen.
- Als de sticker beschadigd, onleesbaar of afwezig is, moet hij vervangen worden.

**ADVERTENCIA**

- Antes de cada utilização, leia atentamente as instruções de utilização e respeite o conjunto dos avisos e instruções incluídas.
- Se o autocollante estiver danificado, ilegível ou ausente, é conveniente substituí-lo.

**UWAGA**

- Przeczytaj instrukcję obsługi i przestrzegaj wszystkich zaleceń i instrukcji.
- Wymień etykiety w przypadku uszkodzenia, nieczytelności lub ich braku.

**FIGYELMEZTÉS**

- Használat előtt olvassa el a felhasználói kézikönyvet és tartson be minden figyelemfelhívást, illetve használati útmutatót.
- Cserélje ki a címkét, ha sérült, olvashatatlan vagy hiányzik.

**Предупреждение**

- Перед использованием внимательно прочитайте инструкцию по эксплуатации.
- Не позволяйте детям использовать эту машину. Не допускайте детей близко к аппарату.

**ATENȚIE**

- Înainte de utilizare, vă rugăm să citiți cu atenție modul de folosire și respectați toate atenționările și instrucțiunile pe care acesta le conține.
- Dacă autocollantul este deteriorat, ilizibil sau lipsește, este indicat să-l înlocuiți.

**UPOZORNENIE**

- Pred akýmkoľvek použitím výrobku si starostlivo prečítajte návod na použitie a rešpektujte všetky upozornenia a pokyny, ktoré sú tu uvedené.
- V prípade, že je samolepiaci štítok poškodený, nečitateľný alebo štítok chýba na výrobku, je potrebné ho vymeniť.

**UPOZORNENÍ**

- Před jakýmkoliv použitím výrobku si pečlivě přečtěte návod k použití a respektujte všechna upozornění a pokyny, která jsou zde uvedena.
- Jestliže je samolepicí štítek poškozen, je nečitelný nebo na výrobku chybí, je nutné jej vyměnit.

**VARNING**

- personskador.
- Läs noga bruksanvisningen innan du använder produkten och ta hänsyn till alla varningar och instruktioner som den innehåller.
- Om dekalen är skadad, oläslig eller saknas, måste den ersättas med en ny.

**ПРЕДУПРЕЖДЕНИЕ**

- Перед использованием продукта, внимательно прочтите инструкцию по эксплуатации и следуйте всем предупреждениям и инструкциям, которые в ней содержатся.
- Любая самонаклеивающаяся лента повреждена, нечитабельна или липсава, тя трябва да бъде сменена.

**UYARI**

- Her kullanımdan önce, kullanım yöntemini dikkatle okumanız ve içindeki tüm uyarı ve talimatları uymanız gerekir.
- Yapışkan etiket zarar görmüş, okunaksız veya mevcut değilse, yenisi ile değiştirilmeli uygun olacaktır.

**ЗАСТЕРЕЖЕННЯ**

- Перед застосуванням прочитайте інструкцію використання та дотримуйтеся усіх попереджень та порад, які вона містить.
- Якщо наклейна пошкоджена, незрозуміла або відсутня, треба її замінити.

**تحذير**

- قبل الاستخدام احرص على قراءة دليل الاستخدام بعناية مع الاهتمام الخاص بجميع التحذيرات والتعليمات التي يتضمنها.
- يجب استبدال اللاصقة إذا تلفت أو تشوهت أو فقدت.

**注意**

- 每次使用前，請仔細閱讀使用說明書，並遵照其中全部說明及注意事項進行使用。
- 如果機器上的膠貼損壞、模糊或缺失，須將其更換。

**注意事項**

- 每次使用前，請仔細閱讀使用說明書，並遵照其中全部說明及注意事項進行使用。
- 如果機器上的膠貼損壞、模糊或缺失，須將其更換。

## PRESENTATION

Snookball is a playful structure allowing you to develop your technique and strategy.  
It is suitable for both young and old.  
Minimum advised age: 6 years.

## NOTES

Read **all** warnings and instructions attached to the product. Before using, read **all** directions for use and the instructions in the user's manual. Keep this manual for future reference.

ANY USE YOU MAKE OF THE SNOOKBALL IS YOUR OWN RESPONSIBILITY.

- |  |  |
|--|--|
| <p>A. General principles for using your Snookball:</p> <ol style="list-style-type: none"> <li>1. Read <b>all</b> the instructions in this manual before using the product. Only use this product in the manner described in this manual. Keep this manual for the entire life of the product.</li> <li>2. The owner is responsible for ensuring that <b>all</b> users of this product are properly informed as to how to use this product safely.</li> <li>3. Snookball does not accept any liability for complaints of personal injury or harm caused to any person or any thing as the result of improper use of the product by the purchaser or by any other person.</li> <li>4. This product must be used inside on a solid flat surface in a sufficiently large space. Make sure that there is sufficient space for completely safe access to and safe movement around the product.</li> <li>5. The user is responsible for ensuring proper care and maintenance of the equipment. After the product has been assembled and prior to each use, check that the fasteners are properly tightened and that none are protruding.</li> <li>6. In the event that your product becomes damaged, immediately have any worn or defective parts replaced by the After-Sales Service Department SNOOKBALL. Do not use the equipment until it has been completely repaired.</li> <li>7. Wear sports shoes to protect your feet while exercising.</li> <li>8. If you feel any pain or if you become dizzy while exercising, stop immediately, rest, and consult a physician.</li> <li>9. Do not modify your product.</li> <li>10. Maximum user weight: 1200kg</li> <li>11. Please comply with the assembly instructions. Bad assembly may lead to injuries.</li> <li>12. Do not jump on a Snookball.</li> <li>13. Do not run on a Snookball.</li> <li>14. Do not walk/run on the angle pockets</li> <li>15. Do not walk/run on the central pockets.</li> </ol> | <p>B. The place where you use your Snookball:</p> <ol style="list-style-type: none"> <li>16. For indoor use only.</li> <li>17. Check that there are no pointed or cutting edges around your Snookball.</li> <li>18. Check that your chosen area is well-lit.</li> <li>19. Make sure that your snookball cannot be used unsafely. Do not allow anybody to use it alone.</li> </ol> <p>C. Using your Snookball:</p> <ol style="list-style-type: none"> <li>20. An adult who has read these instructions should supervise the use of the Snookball.</li> <li>21. Snookball are not advisable for children under 6 years</li> <li>22. Do not jump on the Snookball in order to climb on top.</li> <li>23. Do not jump to come down from the Snookball.</li> <li>24. Do not use it if you feel tired.</li> <li>25. Do not leave your Snookball freely accessible or unsupervised by an adult who knows how to use it.</li> <li>26. Do not allow any object to drag on or next to your Snookball.</li> <li>27. Do not use your Snookball under the influence of alcohol, drugs or medicines.</li> <li>28. Do not put the feet in the pockets</li> </ol> <p>D. Maintaining your Snookball:</p> <ol style="list-style-type: none"> <li>29. Read the assembly instructions before assembling your Snookball.</li> <li>30. Check that your Snookball is in a good state of repair before each use.</li> <li>31. Fix the foot of your Snookball in order to avoid any contact between the structure and the floor.</li> </ol> |
|--|--|

## ADVICE OF ASSEMBLY

You have to be 2 persons to assemble the Snookball.

## MEDICAL WARNING

Before starting any exercise programme, consult your doctor.

Read all instructions before use. SNOOKBALL does not accept any liability for complaints of personal injury or harm caused to any person or any thing as the result of improper use of the product.

## CARE

Protect your SNOOKBALL from the wet.

Use a sponge and clear water to clean the Snookball. Dry it with a dry cotton cloth.

## WARRANTY

Guarantee 1 year subject to normal usage.

SNOOKBALL obligation with regard to this guarantee is limited to the replacement or repair of the product, at the discretion of SNOOKBALL

This warranty does not apply to cases of:

- Damage caused during transport
- Improper or abnormal use
- Poor assembly
- Poor maintenance
- Repairs made by technicians not approved by SNOOKBALL

This warranty does not exclude any legal guarantees applicable according to country and/or province.

 

SNOOKBALL -333 Avenue de Neuville 78950 - Gambais

## STANDARDS

tapis de jeu norme CE NF / EN 14041

Structure bois: EN 314 / Classe 3; BS 1203 / H 4 (WBP); DIN 68705 Partie 3 / Type BFU 100.


# Parre-balloons

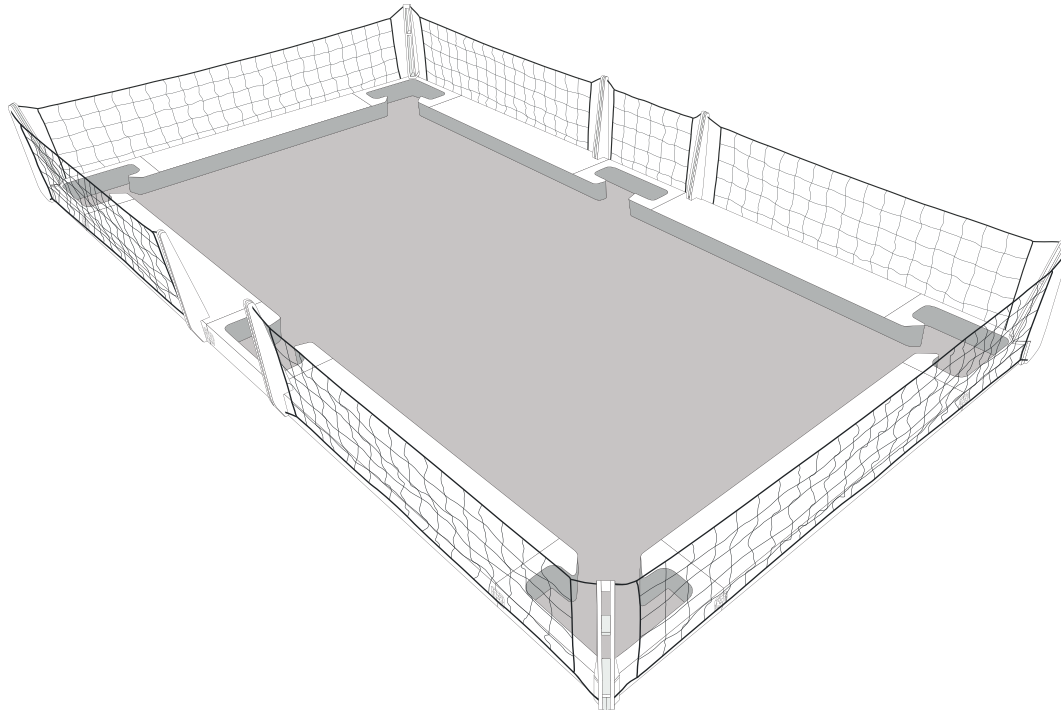


1- Poteau d'angle x 4




2- Poteau central x 4

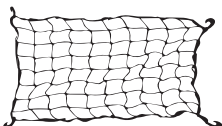

3- Filet largeur x 2  
(3250 mm x 700 mm)

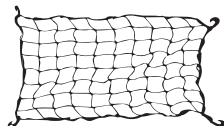

4- Filet longueur x 4  
(2400 mm x 700 mm)

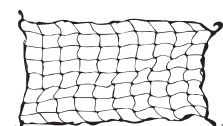


5- Filet porte x 2  
(800 mm x 700 mm)

Made in France - Fabriqué en France




## 1- Fixation des poteaux d'angles :

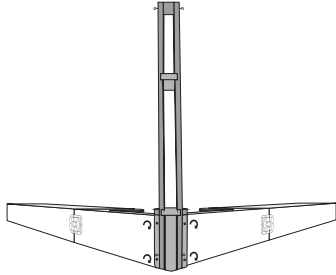


Visser les poteaux d'angles à l'aide des vis n°6.  
ATTENTION! Prépositionner les 4 vis et ajuster les avant le serrage. Procéder par serrage partiels et successifs.

## 2- Fixation des poteaux centraux :

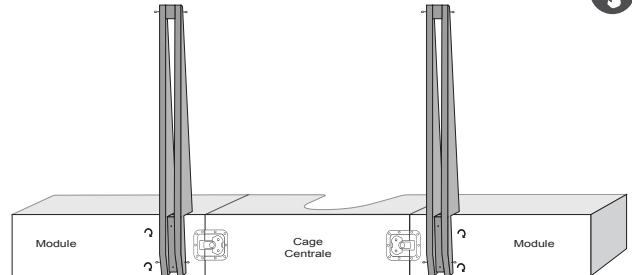


Visser les poteaux d'angles à l'aide des vis n°6.  
ATTENTION! Prépositionner les 4 vis et ajuster les avant le serrage. Procéder par serrage partiels et successifs.

## 3- Fixation des filets :

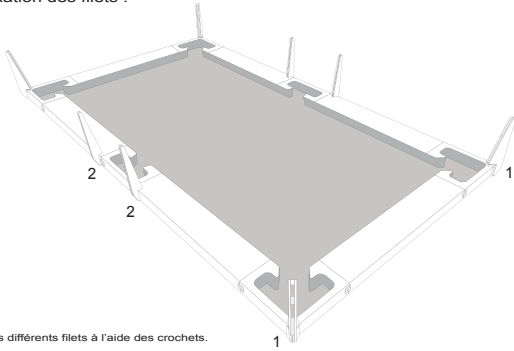

Fixer les différents filets à l'aide des crochets.

## 4- Fixation des filets :

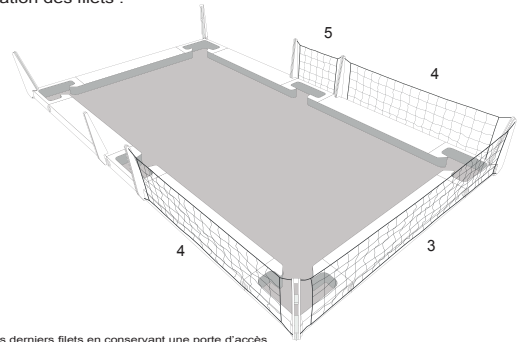

Fixer les derniers filets en conservant une porte d'accès.

